

EVERY DROP IS PRECIOUS

“designed to save you money
by saving water & energy”

HAIR WASH SHOWER HEAD FITTING GUIDE, TO A SHOWER HOSE

N.B: Not suitable for use with electric or pumped showers.

Thank you for purchasing the Hair Wash Shower Head, we hope you will be delighted with it. Please see www.everydropisprecious.com to see our full range of water, energy & money saving packs and products for your home, pets, garden and business, along with useful tips and info, to help further reduce your water & energy bills.

These fitting guidelines have been prepared to help you but you must exercise due care and attention at all times. We do not accept any responsibility for damage / problems that may occur through improper fitting or use.

ABOUT THIS PRODUCT:

The Hair Wash Shower Head has been designed for easy, less mess hair washing. Once fitted and the tap(s) is turned on, you simply push the lever for water to flow, and release to stop the flow. It ensures water isn't needlessly wasted whilst you are busy shampooing / rinsing your hair, and means you don't have to turn the taps off every time you put the hose down to avoid being soaked!

PARTS AND CONTENTS INCLUDED IN PACK:



1 Hair Wash Shower Head (with integrated back flow prevention)

PREPARATION:

Remove Hair Wash Shower Head from its packaging and inspect for any transport damage prior to fitting. Turn off your taps before fitting.

CLEANING:


Clean your Hair Wash Shower Head with a damp cloth to remove any scum/lime scale build up. Please do not use abrasive chemicals as they may cause damage.

WARRANTY:

The Hair Wash Shower Head is under warranty for 2 years against any manufacturing defects. In the unlikely event that your Hair Wash Shower Head should be broken / faulty within the 2 year warranty period through no fault of your own, please contact us directly.

STEP 1 of 1

Unscrew your existing shower head and screw on your new Hair Wash Shower Head, until a tight fit.

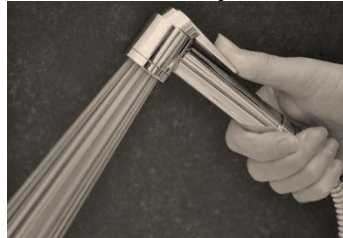

TO USE: Simply turn on the tap(s) or shower and push the lever on the Hair Wash Shower Head to operate. You can adjust the water flow by using less pressure on the lever (if you find the pressure is too strong, then only turn the taps on half way). When you have finished using the Hair Wash Shower Head,

REMEMBER TO TURN OFF YOUR TAP(S) / SHOWER!

WARNING: IT IS IMPORTANT TO ALWAYS TURN OFF THE WATER AFTER USE, TO AVOID BURSTING THE HOSE. THE “HAIR WASH SHOWER HEAD” CANNOT BE USED AS A PERMANENT WATER STOP, AND HAS ONLY BEEN DESIGNED TO GIVE A TEMPORARY SHUT OFF.

Please see our videos on our website for more information or give us a call.